

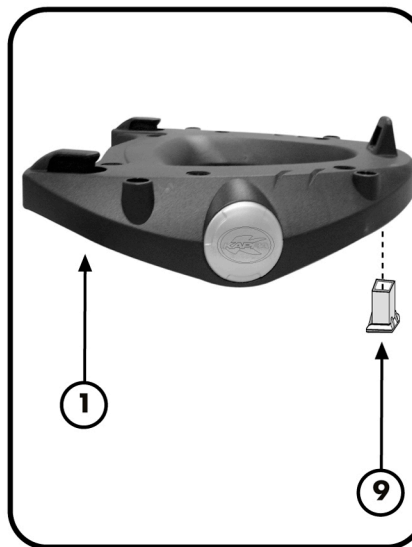


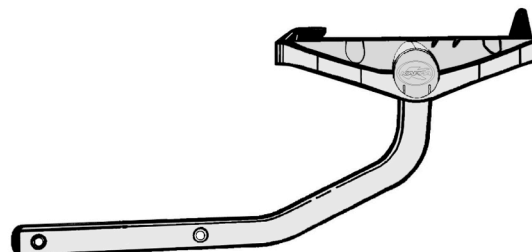

# art. KM5

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTION  
 PLAN DE MONTAGE  
 BAUEINLEITUNG - ISTRUCCIONES DE MONTAJE

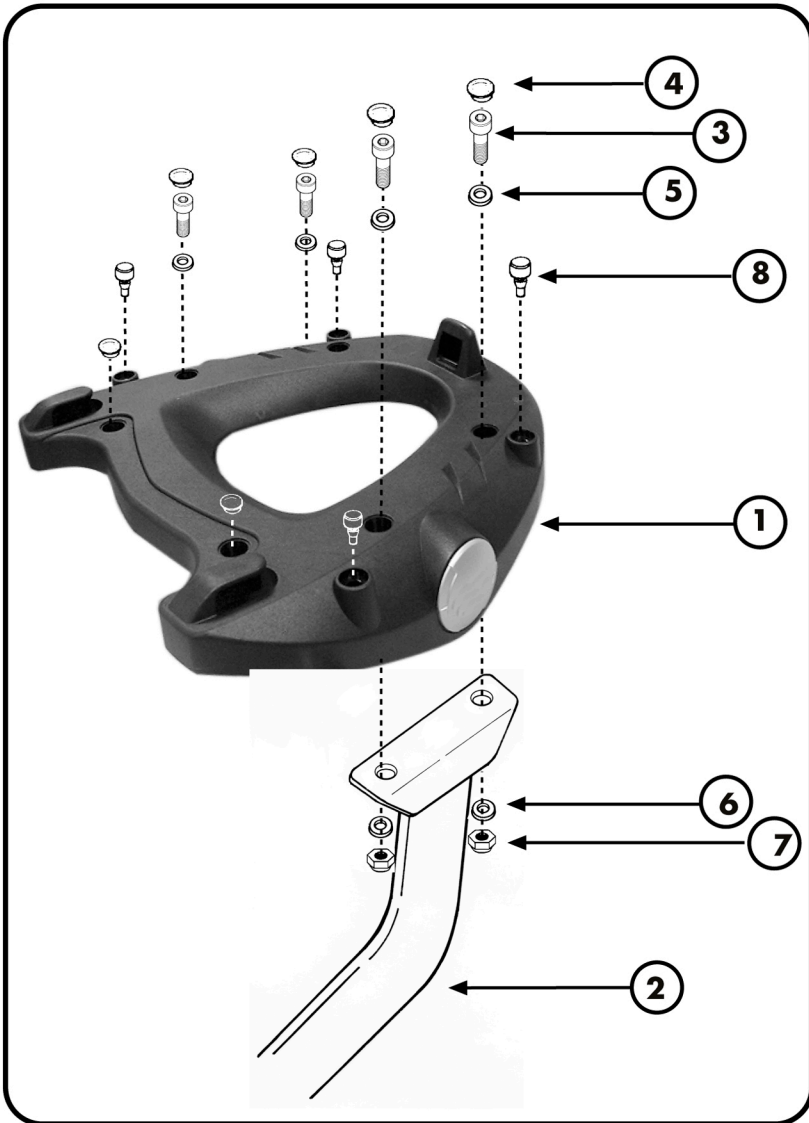

**1**  
Z622

PIASTRA  
 PLATE  
 PLATINE  
 PLATTE  
 PLETINA

**Q.TY n.1**

**2**

**Q.TY n.-**

**3**

**VITE TCEI M 6X25**  
 BOLT M 6X25  
 VIS M 6X25  
 SCHRAUBE M6X25  
 TORNILLO M6X25

**Q.TY n.4**

**4**

**COPRIFORO**  
 HOLE CAP  
 CACHE TROUS  
 ABDECKUNG  
 TAPA AGUJERO

**Q.TY n.6**

**5**

**RONDELLA Ø 6**  
 WASHER Ø 6  
 RONDELLE Ø 6  
 SCHEIBE Ø 6  
 ARANDELA Ø 6

**Q.TY n.4**

**6**

**RONDELLA Ø 6 X 18**  
 WASHER Ø 6X18  
 RONDELLE Ø 6X18  
 SCHEIBE Ø 6X18  
 ARANDELA Ø 6X18

**Q.TY n.4**

**7**

**DADO M 6 AUTOBL.**  
 NUT M 6  
 ECROU M 6  
 MUTTER M 6  
 TUERCA M 6

**Q.TY n.4**

**8**  
Z 126

**GOMMINO**  
 RUBBER SPACER  
 CAOUTCHOUC  
 GUMMI  
 GOMAS

**Q.TY n.4**

**9**  
Z 872

**TAPPO ANTIFURTO**  
 ANTI-THEFT CAP  
 BOUCHON ANTIVOL  
 ANTI-DIEBSTAHL  
 TAPON ANTIRROBO

**Q.TY n.1**