

PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE
 SPEZIFISCHER STURZBÜGEL - DEFENSA DE MOTOR ESPECIFICA - PARAMOTOR ESPECIFICO

BMW F650/800GS 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE
 BAUANLEITUNG - INSTRUCIONES DE MONTAIE - INSTRUCOES DE MONTAGEM


1



PARAMOTORE SPECIFICO
 ENGINE GUARD
 PARE-CARTER
 STURZBÜGEL
 DEFENSA DE MOTOR
 PARAMOTOR
 ESPECIFICO

Q.TY n.2 (dx+sx)


2

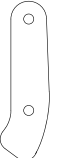

SUPPORTO
 SUPPORT
 SUPPORT
 SPOORTE
 SUPORTE

Q.TY n.1


3



SUPPORTO
 SUPPORT
 SUPPORT
 SPOORTE
 SUPORTE

Q.TY n.1


4



NIPPLES

Q.TY n.1

5



DISTANZIALE Ø18x20mm
 SPACER
 ENTRETOISE
 DISTANZSTÜCK
 DISTANCIADOR


Q.TY n.1

6




DISTANZIALE Ø18x15mm
 Foro Ø8,5mm, C18115F8T
 SPACER
 ENTRETOISE
 DISTANZSTÜCK
 DISTANCIADOR

Q.TY n.1

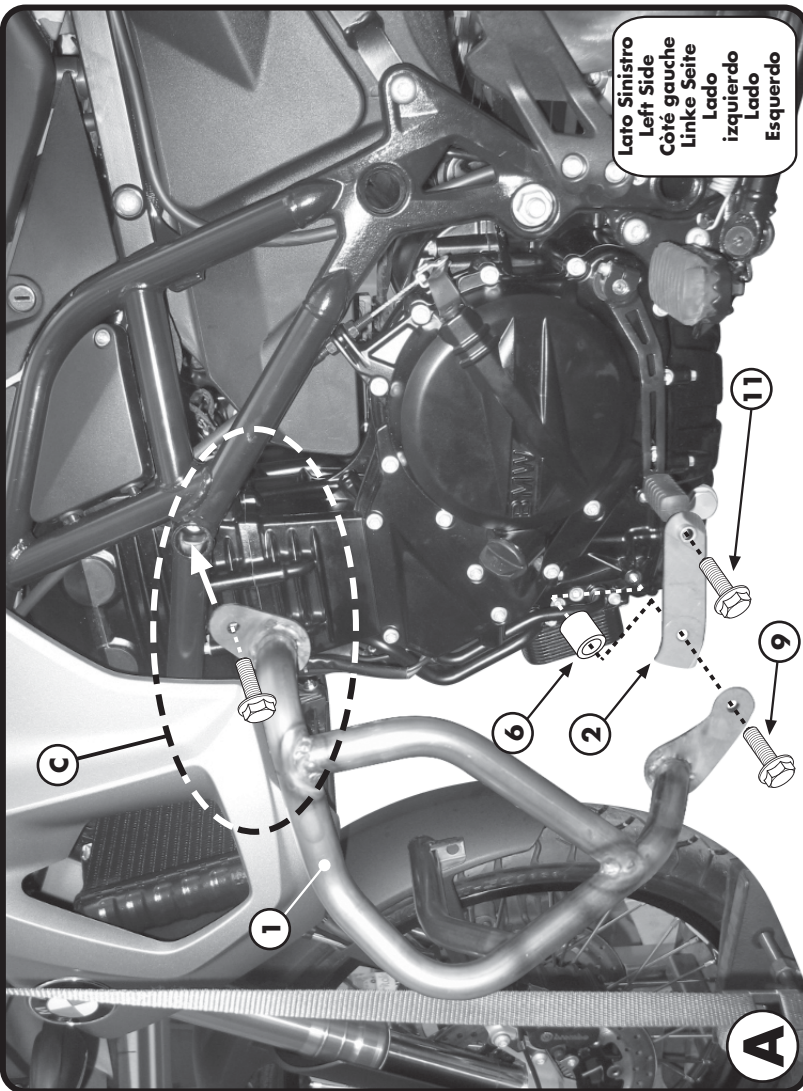

7



DISTANZIALE Ø18x35mm
 Foro Ø8,5mm, C18135F8T
 SPACER
 ENTRETOISE
 DISTANZSTÜCK
 DISTANCIADOR

Q.TY n.2


8



VITE TCEI M8x3,5mm
 SCREW
 VIS
 SCHRAUBE
 TORNILLO
 PARAFUSO


Q.TY n.1

9

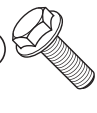

VITE TEF M8x40mm
 SCREW
 VIS
 SCHRAUBE
 TORNILLO
 PARAFUSO

Q.TY n.1

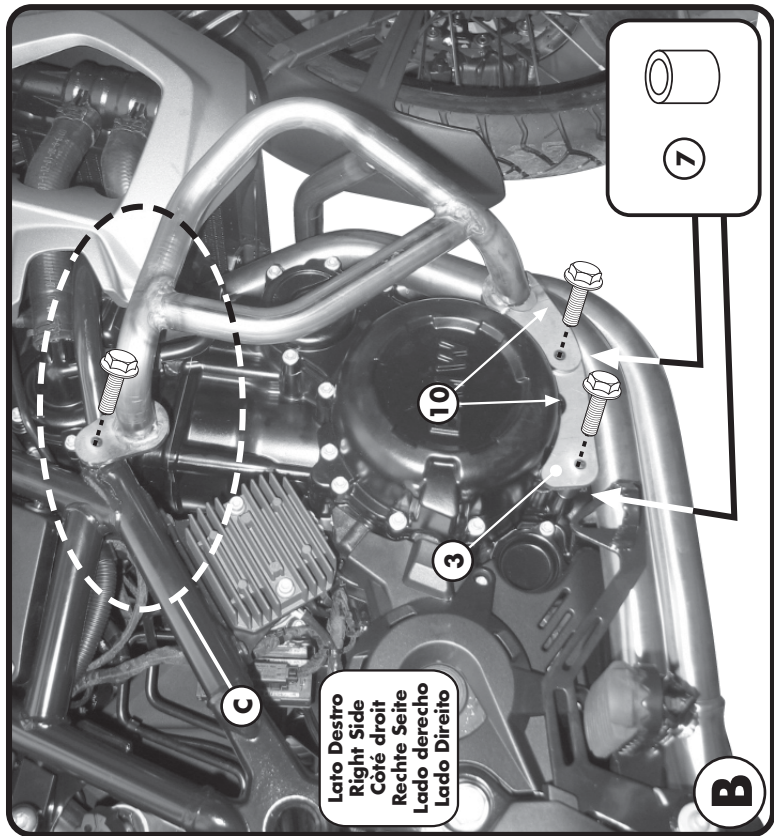


PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE
 SPEZIFISCHER STURZBÜGEL - DEFENSA DE MOTOR ESPECIFICA - PARAMOTOR ESPECIFICO

BMW F650/800GS 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE
 BAUANLEITUNG - INSTRUCCIONES DE MONTAIE - INSTRUÇÕES DE MONTAGEM

TN690-KN690

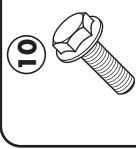


Q.TY n.2
 VITE TEF M8x60mm
 VIS
 SCHRAUBE
 OBRUSILCO
 PARAFUSO



Q.TY n.3
 VITE TEF M8x25mm
 VIS
 SCHRAUBE
 OBRUSILCO
 PARAFUSO





Q.TY n.1
 RONDELLA Ø8mm
 WASHER
 RONDELLE
 SCHEIBE
 ARRANDELA
 ARRUELA

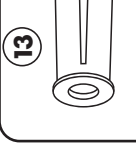

Q.TY n.2
 FISHER
 EXPANDING TUBE INSERT
 CHEVILLE
 ELASTISCHER ROHRENSATZ
 TACO



Q.TY n.2
 CONO FILETTATO
 Ø17x10mm M8
 THREADED CONE
 KEGEL GEWINDKE
 CONO ROSCADO

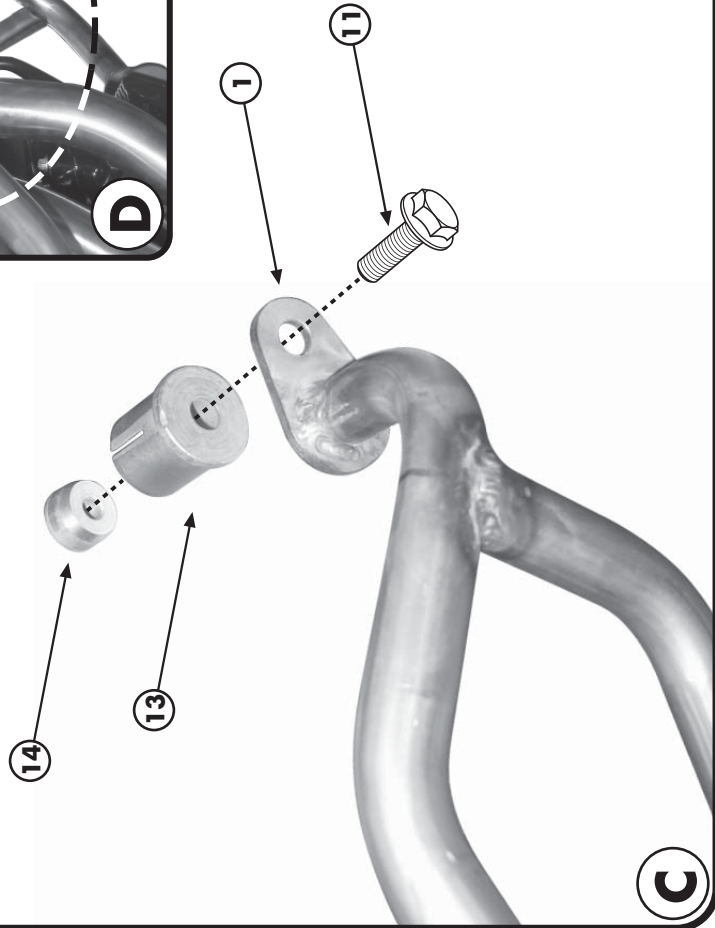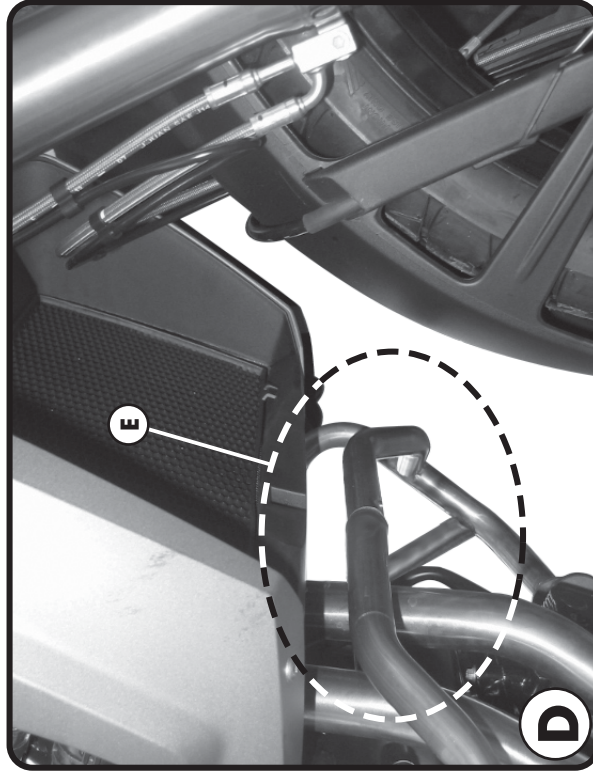

SI RACCOMANDA DI FARE ESEGUIRE IL MONTAGGIO AD UN MECCANICO QUALIFICATO
 WE RECOMMEND THAT THE MOUNTING IS CARRIED OUT BY A QUALIFIED MOTORCYCLE MECHANIC
 IL EST RECOMMANDE DE FAIRE EXECUTER LE MONTAGE PAR UN MECANICIEN QUALIFIE
 WIR EMPFEHLEN DAß DIE MONTAGE VON EINEM FACHMECHANIKER DURCHGEFUHRT WIRD
 LES RECOMENDAMOS QUE EL MONTAIE DE LA DEFENSA SE REALICE POR UN MECANICO CALIFICADO

